



Instruction manual for FASST compatible 7 Channel receiver.  
Futaba and Futaba FASST are trademarks of the Futaba corporation.

#### Specifications:

Number of Channels 7  
Dimension 37x22x8 mm  
Weight 8 g  
Operating voltage 3.6V-10 V  
Operating temperature -10 to 60 degrees Celsius  
2 selectable failsafe options

#### Binding procedure:

Turn on the transmitter, connect the receiver battery to the receiver pressing the receiver's FS button at the same time. Red light will turn on first, the GREEN LED light comes on solid. The binding process is accomplished and the receiver is ready to use.

#### Failsafe:

2 options: either use the failsafe of your transmitter which maybe set on the transmitter or set the failsafe on your receiver. If you prefer to set failsafe on the receiver side, the transmitter failsafe has to be disabled, as it has priority.

#### How to set failsafe on the receiver:

Bind the receiver first  
Disable failsafe set in your transmitter  
Set all transmitter controls to the desired failsafe positions  
Press the FS (Failsafe button, same as the binding button) on your receiver briefly.  
The GREEN LED light of the receiver will blink twice, indicating that Failsafe is set

If the failsafe function of the receiver is no longer wanted, re-bind the receiver

#### Signals indicating status of your receiver:

GREEN LED ON Receiver is in working mode  
GREEN LED and RED LED on Receiver is waiting to be bound  
RED LED flashing Green LED ON Signal is weak or lost  
RED LED ON GREEN LED flashing twice indicates Failsafe is set

Dymond Modelsport USA LLC phone for technical service 9-5 ET (704) 635-8808